
Locomotive Construction Washers

These washers can be used when scratch building locomotives to assist in giving consistent clearances or restricting the clearances. They are full material and half etched, allowing accurate thicknesses to be made up as required. Two frets are provided.

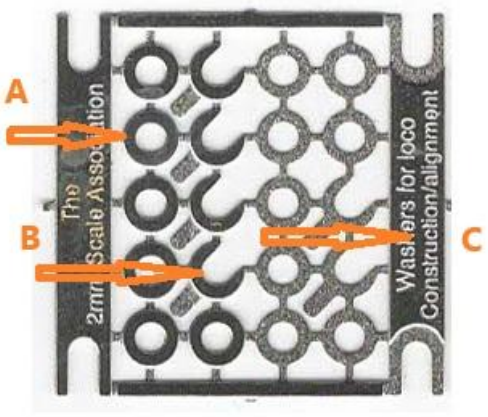

- The Full Washers (A) can be used on stub axles, between frame and muff or between frame and wheel to control the side play. This would typically be on a driven axle and the other undriven axles may have more movement.
- The Open Washers (B) are included for setting up worm gear play, ensuring that the play in that axle is equal on each side.
- The Frame Gauges (C) can be used to ensure that wheelsets have the correct clearances.
- **© 2025 The 2mm Scale Association**